



FX-18 EV9 Pylon Seismic Installation

Notes: 41" W x 85" H x 34" D overall installed.

Fixture ships partially assembled and attached to a 40" x 48" pallet.
Bolting to floor is required in seismic regions.

Double-sided EV pylon (wood, steel, plastic)
273 lbs. complete

Preparation:

Determine showroom floor location.





Parts & Tools Included:

- Pylon structure on shipping pallet
- Two base covers
- Seismic Floor bolt kit
- Wrench

Tools & Materials Required:

- Two-person job
- Pallet jack and flat dolly
- Hammer drill and concrete bits
- Broom and dustpan or vacuum
- Soft dust cloth

Seismic Floor Bolt Kit:

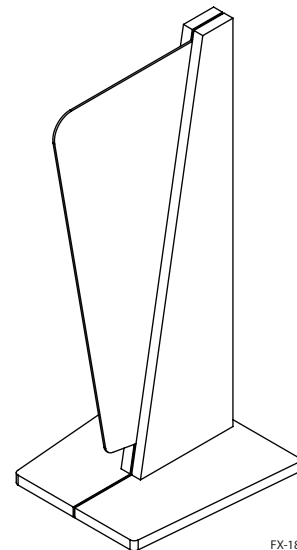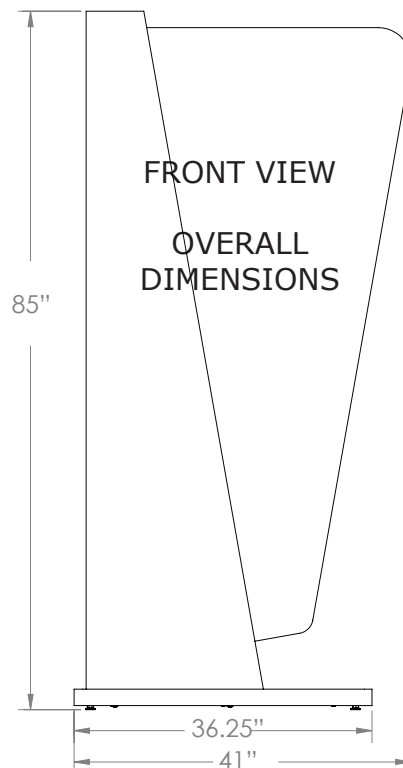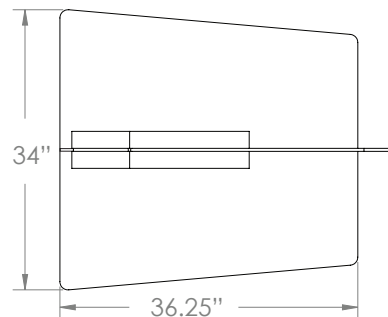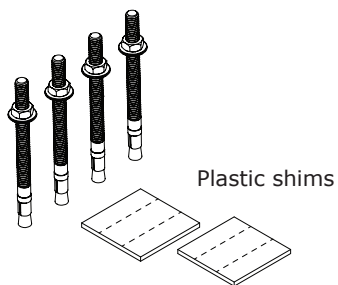

FX-18_EV9-seismic-Pylon-IS.ai
Jan. 29, 2024



FX-18 EV9 Pylon Seismic Installation


Shipping

Fixture ships bolted down to a pallet.


Use pallet jack to move pallet.

a) Remove four bolts from the steel baseplate with the provided wrench.


Tilt as shown onto dolly to move off of pallet.

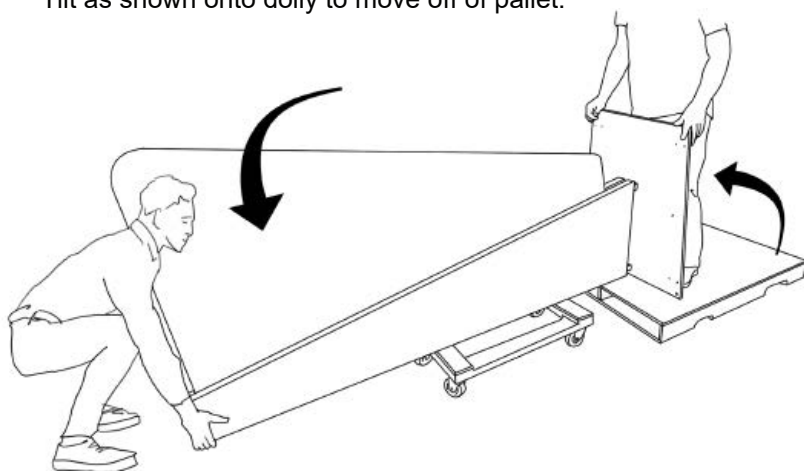

Two base covers are packaged separately. Attach base covers as the last step.

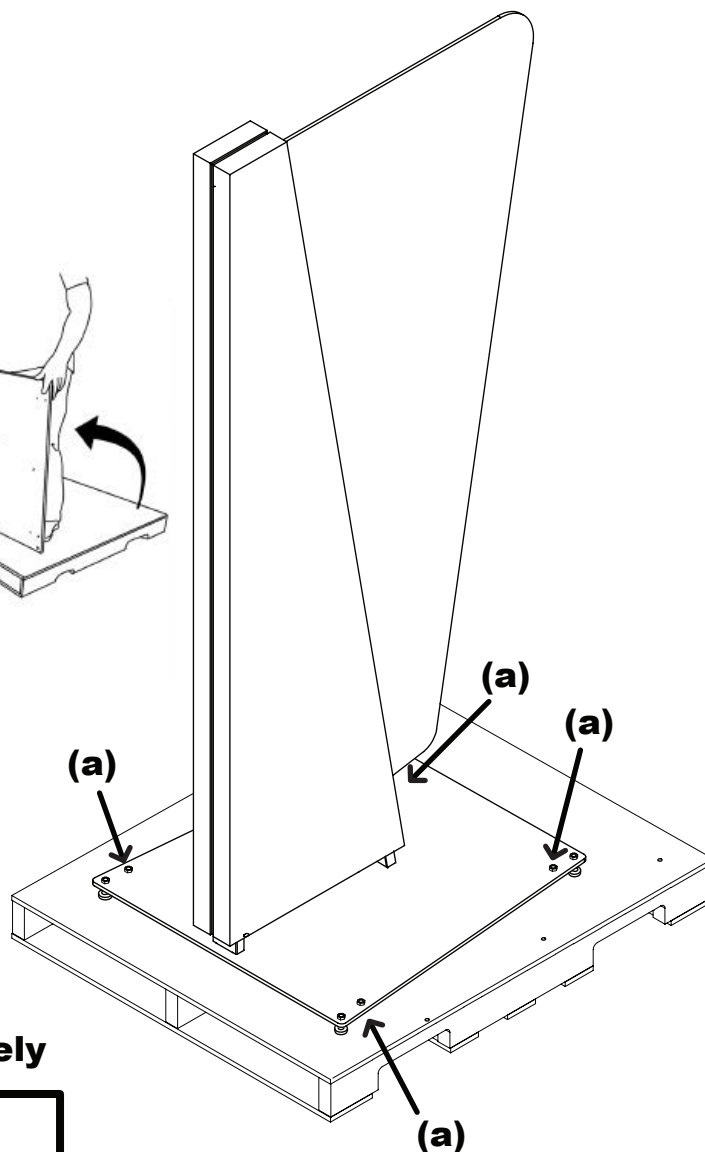

Base covers packaged separately

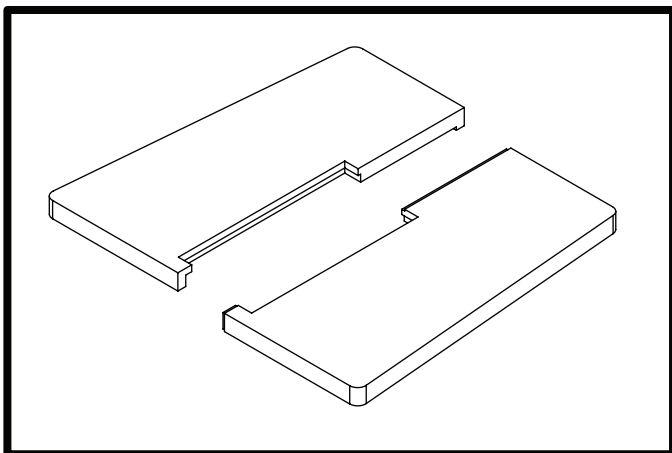


FX-18_EV9-seismic-Pylon-ISai
Jan. 29, 2024




Seismic Region Installation

Seismic bolt-down kit instructions

- b) Place fixture in desired location.
- c) Level unit with the adjustable levelers.
- d) Mark four bolt-down hole locations through the holes nearest the levelers.
- e) Temporarily move fixture out of the way.
- f) Drill holes for provided floor bolts with a hammer drill and concrete bit. Be sure to confirm depth based on level adjustments of the base and levelers.
- g) Clean up drilling debris.
- h) Reposition fixture over the new floor holes.
- i) Insert and properly secure four floor bolts.
- j) Base covers attach by placing over top plate and sliding beneath triangle piece on each side. Magnets secure them in place.
- k) Be careful with the printed acrylic plastic panel. Avoid touching the panel or scratching the surface. Use only a soft cloth and no chemicals to remove lint or fingerprints.
- l) Clean up and discard remaining debris and packing materials.

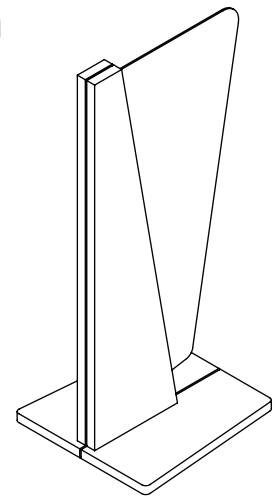

As installed

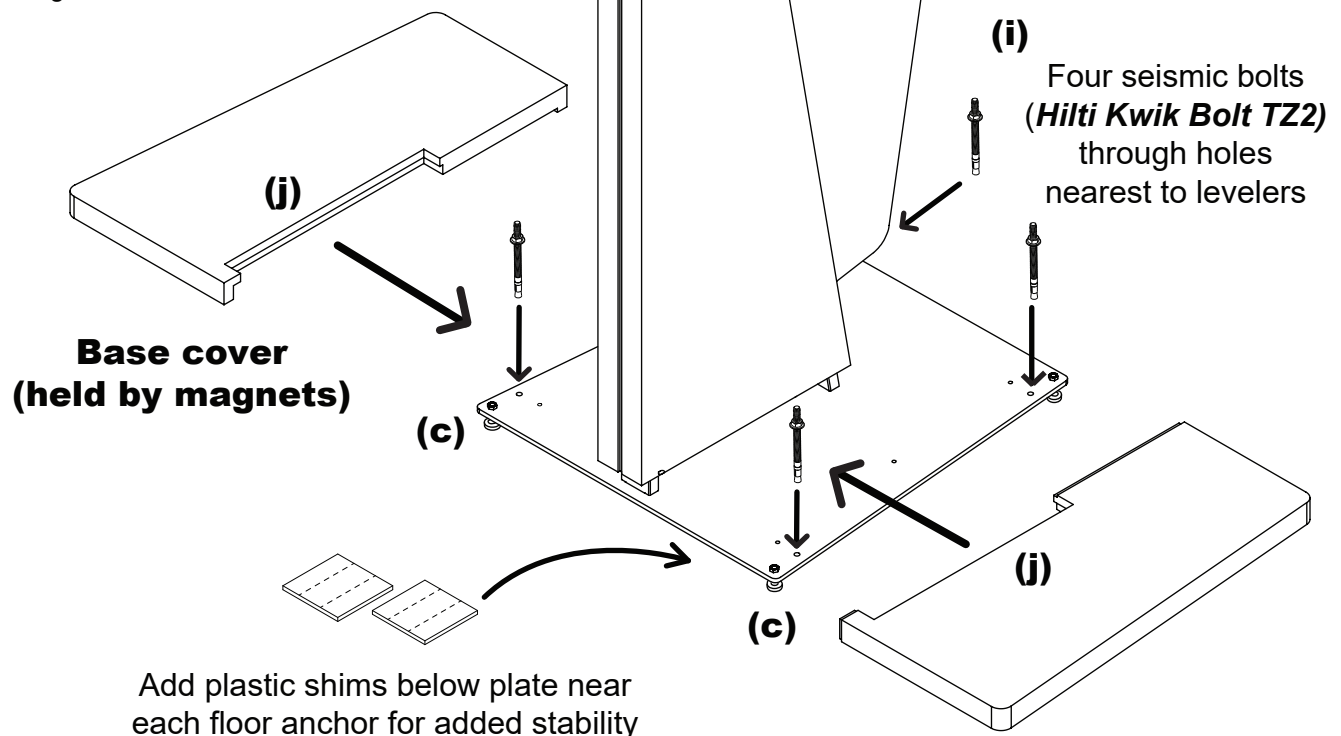

FX-18_EV9-seismic-Pylon-IS.ai
Jan. 29, 2024

Care & Maintenance

Cleaning:

- Use only a lint-free soft cloth dampened with water.
- Do not use paper towels, which can be abrasive.
- Do not use ammonia or any solvent-based spray cleaner.
- Do not use Windex® or similar products.

Repositioning:

- Avoid touching or using the plastic printed panel for moving the fixture.
- There are four adjustable levelers beneath the base which can be used to help offset uneven floor surfaces.
- The base covers are attached with magnets at the seam and are removable.



FX-18_EV9-seismic-Pylon-15.ai
Jan. 29, 2024