



Interior Fixture Care Guide

PLEASE KEEP THIS DOCUMENT FOR REFERENCE.

Laminate or Solid Surface:

Clean with a soft cloth dampened with warm water and a mild soap or detergent followed by a soft, dry cloth to prevent streaking. Difficult stains can be removed using a mild cleaner/detergent such as Dawn® dishwashing liquid and a soft bristled brush, repeat as necessary. Rinse with warm water and wipe dry.

Do not use Windex®, Glass Plus®, Fantastik®, Favor®, Pledge®, Mr. Clean®, Formula 409® or Clorox®. Do not use acidic or abrasive cleaners on any laminate or solid surface. **WARNING:** Prolonged exposure of the laminate or solid surface to bleach will cause discoloration.

Do not use products that contain the following chemical ingredients: hydrochloric acid (muriatic acid, hydrogen chloride), sulfuric acid (oleic acid, oil of vitriol, oleum), hydrofluoric acid (rust remover), phosphoric acid (rust remover), sodium hydroxide (caustic soda, caustic lye, soda lye) or pumice (abrasive).

Glass surfaces:

Clean with glass cleaner such as Windex. Apply the cleaner to a rag instead of spraying the glass to help prevent chemicals from getting between and behind the glass panels and possibly attacking the adhesives holding the glass.

Acrylic surfaces:

Clean acrylic surfaces with a soft cloth dampened with warm water followed by a soft, dry cloth to prevent streaking. A mild detergent, such as Joy® or Dawn, may be used to remove oily fingerprints and grease and to reduce static.

Powder-coated surfaces:

Clean powder-coated surfaces with a soft, dampened cloth with warm water followed by a soft, dry cloth to prevent streaking.

Painted surfaces:

Clean painted surfaces with a soft, dampened cloth with warm water followed by a soft, dry cloth to prevent streaking.